


## Quick guide — — Overview buttons and guidance screen

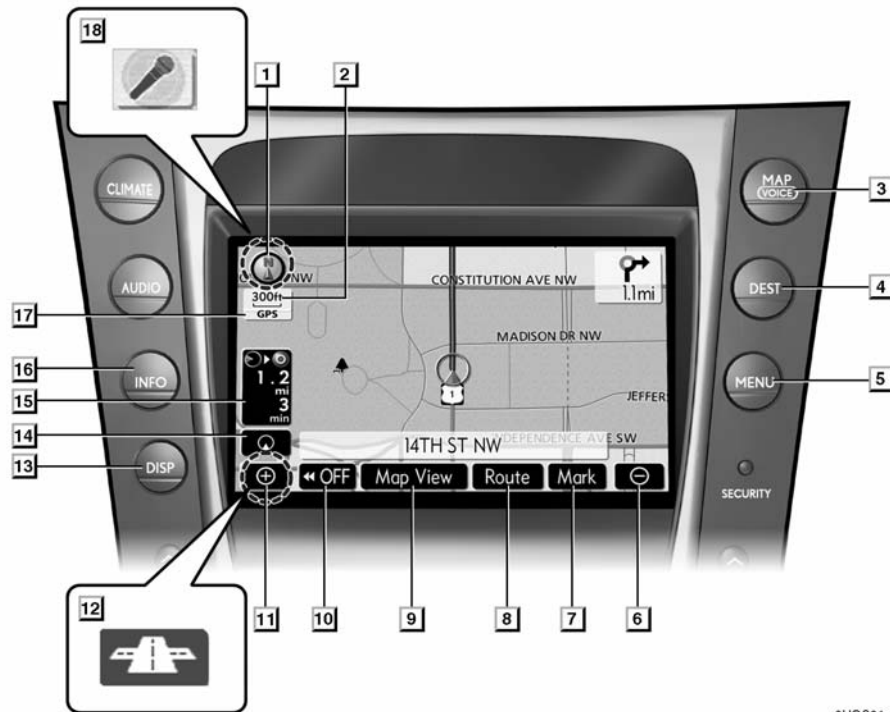


0UGS01a

No.	Name	Function	Page
1	<b>North-up or heading-up symbol</b>	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	35
2	<b>Scale indicator</b>	This figure indicates the map scale.	33
3	<b>“MAP/VOICE” button</b>	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	26, 68
4	<b>“DEST” button</b>	Push this button to display the “Destination” screen.	7, 9, 11, 12, 38, 39
5	<b>“MENU” button</b>	Push this button to display the “Menu” screen.	84, 86, 87, 88, 91, 104, 149

No.	Name	Function	Page
<b>6</b>	<b>Zoom out touch-screen button</b>	Touch this button to reduce the map scale.	33
<b>7</b>	<b>“Mark”</b>	Touch this button to register the current position or the cursor position as a memory point.	28
<b>8</b>	<b>“Route”</b>	Touch this button to change the route.	70, 72
<b>9</b>	<b>“Map View”</b>	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	76, 78, 79, 80
<b>10</b>	<b>“◀◀OFF”</b>	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶”.	107
<b>11</b>	<b>Zoom in touch-screen button</b>	Touch this button to magnify the map scale.	33
<b>12</b>	<b>Foot print map touch-screen button</b>	Touch this button to display the foot print map and the building information.	34
<b>13</b>	<b>“DISP” button</b>	Push this button to display the “Display” screen.	130
<b>14</b>	<b>Screen configuration touch-screen button</b>	Touch this button to change the screen mode.	31
<b>15</b>	<b>Distance and time to destination</b>	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	69
<b>16</b>	<b>“INFO” button</b>	Push this button to display the “Information” screen.	116, 120, 128 131, 134
<b>17</b>	<b>“GPS” mark (Global Positioning System)</b>	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	138
<b>18</b>	<b>Speech command system indicator</b>	The microphone is shown by pushing the speech command switch. The speech command system can be operated while this indicator is shown.	125

## — Registering home

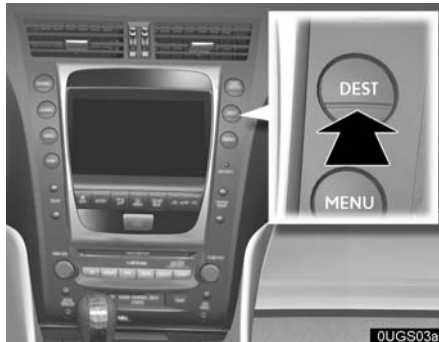


**1 Push “DEST” button.**




**2 Touch .**

If home has not been registered, you can register it by touching .

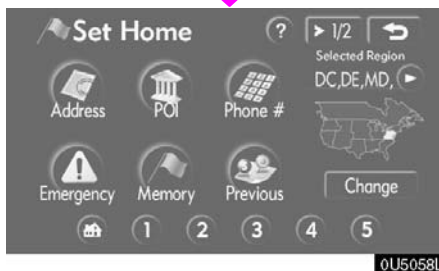


**3 There are 11 different methods to search your home.**

See “Destination search” on page 39.

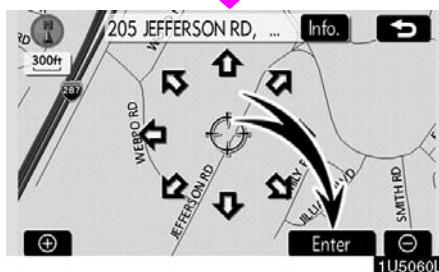

**4 Touch “Enter”.**

The “Memory Point” screen is displayed.

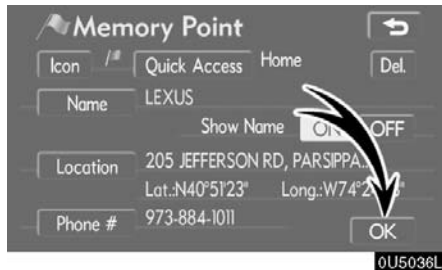


##### 5 Touch "OK".

Registration of home is complete.

You can also register home by touching the "**MENU**" button. (See " — Registering home" on page 98.)

You can change the icon, quick access, name, location and phone number. (See " — Editing memory points" on page 93.)

## — Registering preset memory point (Quick access)

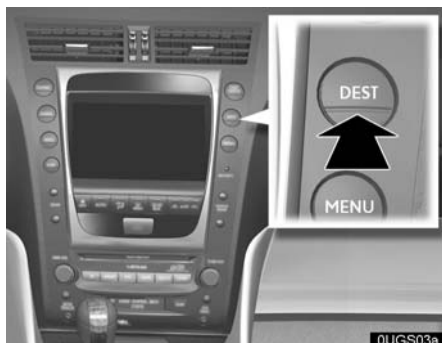


**1 Push “DEST” button.**




**2 Touch one of the quick access buttons.**

You can set a memory point to one of the quick access buttons which has not been set.

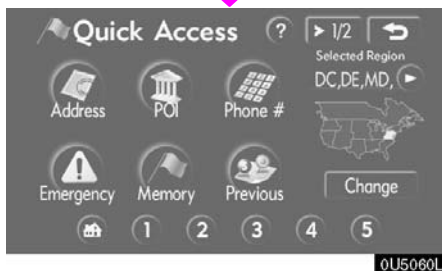


**3 There are 12 different methods to search a preset memory point.**

See “Destination search” on page 39.

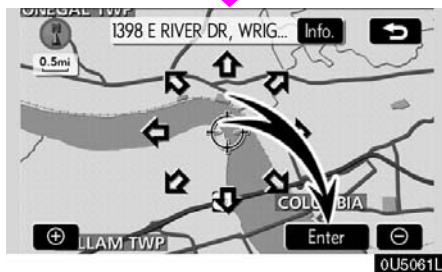

**4 Touch “Enter”.**

The “Memory Point” screen is displayed.

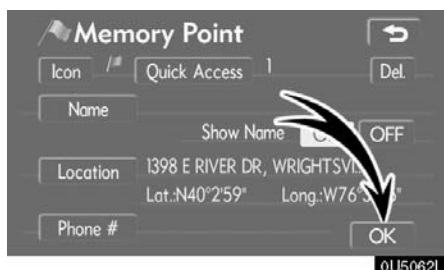

##### 5 Touch “OK”.


Registration of the preset memory point is complete.

You can also register preset destinations by touching the “**MENU**” button. (See “ — Registering memory points” on page 92.)

You can change the icon, quick access, name, location and phone number. (See “ — Editing memory points” on page 93.)

The registered points can be used on the “Destination” screen. (See “ — Destination search by Quick access” on page 42.)

## — Operation flow: guiding the route

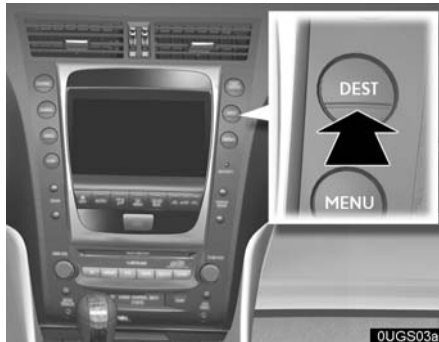


**1 Push “DEST” button.**



**2 There are 13 different methods to search destinations.**

See “Destination search” on page 39.

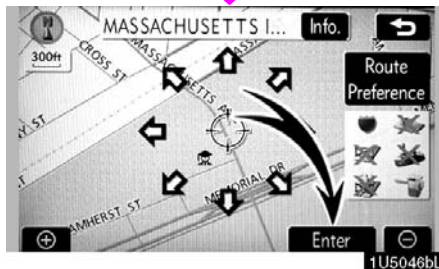

**3 Touch “Enter”.**

The navigation system performs a search for the route.




**4 Touch “Guide”, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 59.)

**5 Guidance to the destination is given via voice and on the guidance screen.**


## — Setting home as the destination

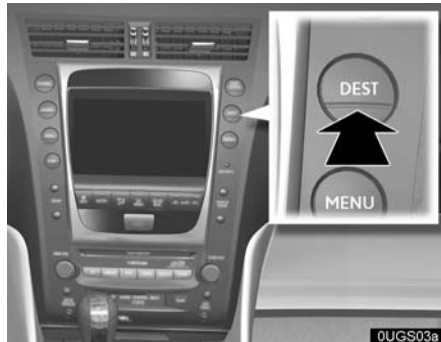


**1 Push “DEST” button.**



**2 Touch .**

The  can be used if your home has been registered. (To register “Home”, see “— Registering home” on page 98.)

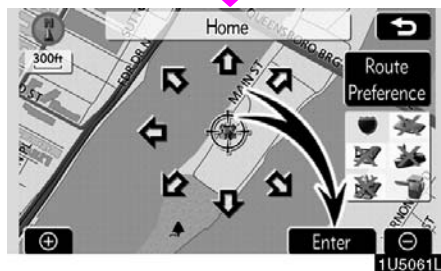

**3 Touch “Enter”.**

The navigation system performs a search for the route.



**4 Touch “Guide”, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 59.)

**5 Guidance to the destination is given via voice and on the guidance screen.**